


Installation/Instructions for Use

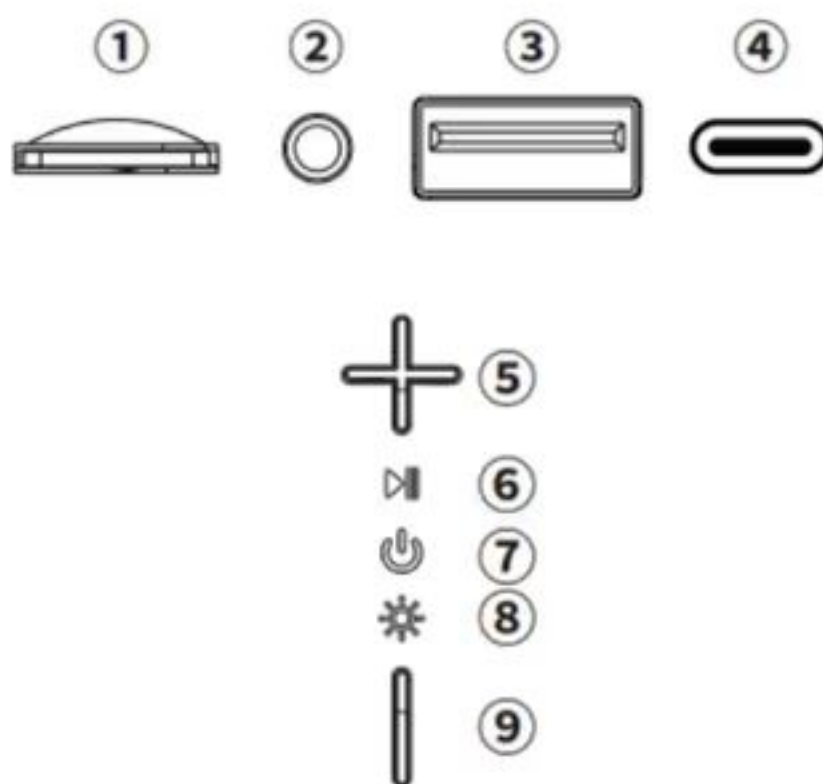

- ① TF card input interface: When the TF card is inserted, it can decode MP3/WAV format audio playback;
- ② AUX input interface: 3.5mm audio head external sound input
- ③ U disk input interface: When the U disk is inserted, it can decode MP3/WAV format audio playback;
- ④ DC 5V power interface (TYPE-C USB charging interface)
- ⑤ Volume up button: In music mode, short press for "next song/FM next station", long press to increase the volume
- ⑥ Pause button: In music mode (U disk, TF card, LINEIN), short press for "play, pause", in wireless mode and paired with the phone, short press once when a call comes in for hands-free answering/hanging up; in FM mode, short press to automatically search for stations/pause searching for stations; when two speakers are in wireless mode at the same time and not connected, long press the pause button on one of the speakers to hear a prompt tone and one of the indicator lights is always on, indicating that TWS is successfully connected, and then connect the phone.
- ⑦ Power button: Long press to turn on when the device is off, long press to turn off when the device is on; short press to switch between modes (U disk, TF card, FM) LINE IN linear input is hard switching;
- ⑧ Colorful light button: In music mode, long press to turn on/off the colorful lights; short press to switch the colorful light flashing mode;
- ⑨ Volume down button: In music mode, short press for "previous song/FM previous station", long press to decrease the volume