



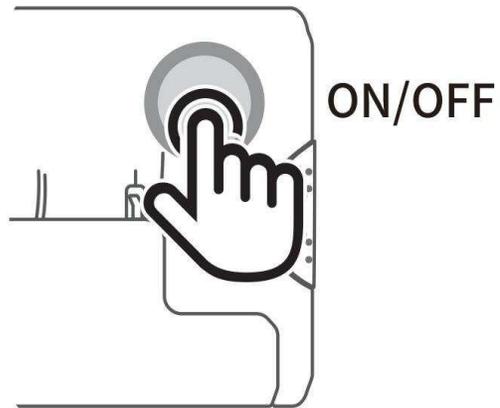

① Hold for 2s

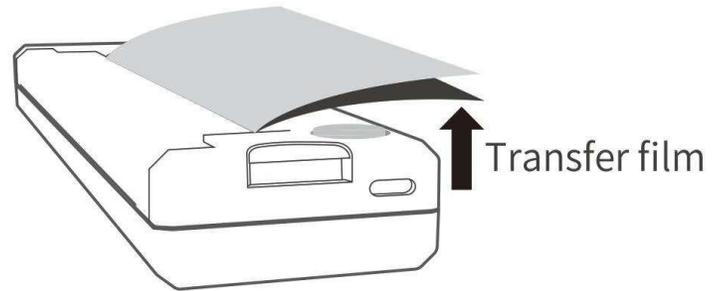


 
② Print side down



③ App printing



PC printing

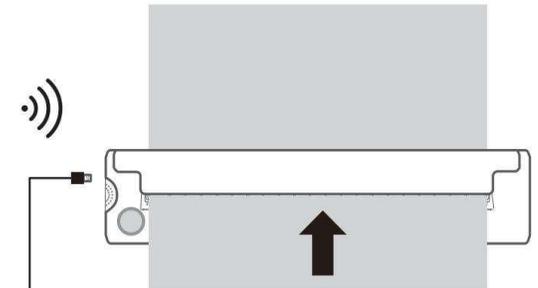

<https://www.ileadtek.com/en/download.html>

Wireless Tattoo Transfer Printer User Manual

Please scan the QR code to view the English manual.

请扫描二维码, 查看中文说明书。

請掃描二維碼, 查看中文說明書。

二次元コードを読んで、日本語の説明書を見てく
ださいます。

QR코드를 스캔하여 한국어 설명서를 보십시오.

Bitte scannen Sie den QR-Code, um das
Deutschland-Handbuch anzuzeigen.

Digitalize o código qr para ver o manual de instruções
em português.

Scannerizzare il codice qr e controllare le istruzioni per
l'uso in italiano.

Пожалуйста, сканируйте двухмерный код и проверьте
русскую инструкцию.

Escanee el código qr para ver el manual de instrucciones
en español.

Veillez scanner le code qr pour voir le manuel
d' instruction en français.

Mangyaring i-scan ang QR code at suriin ang mga tagubilin
sa wikang Pilipino.

Silakan imbas kode QR untuk melihat manual
bahasa Indonesia.


Sila imbas kod QR dan periksa arahan dalam bahasa Malay.

Xin vui lòng quét mã qr, xem thông số kỹ thuật việt nam.

กรุณาตรวจสอบรหัสภาษาไทยด้วย.




Product Sketch

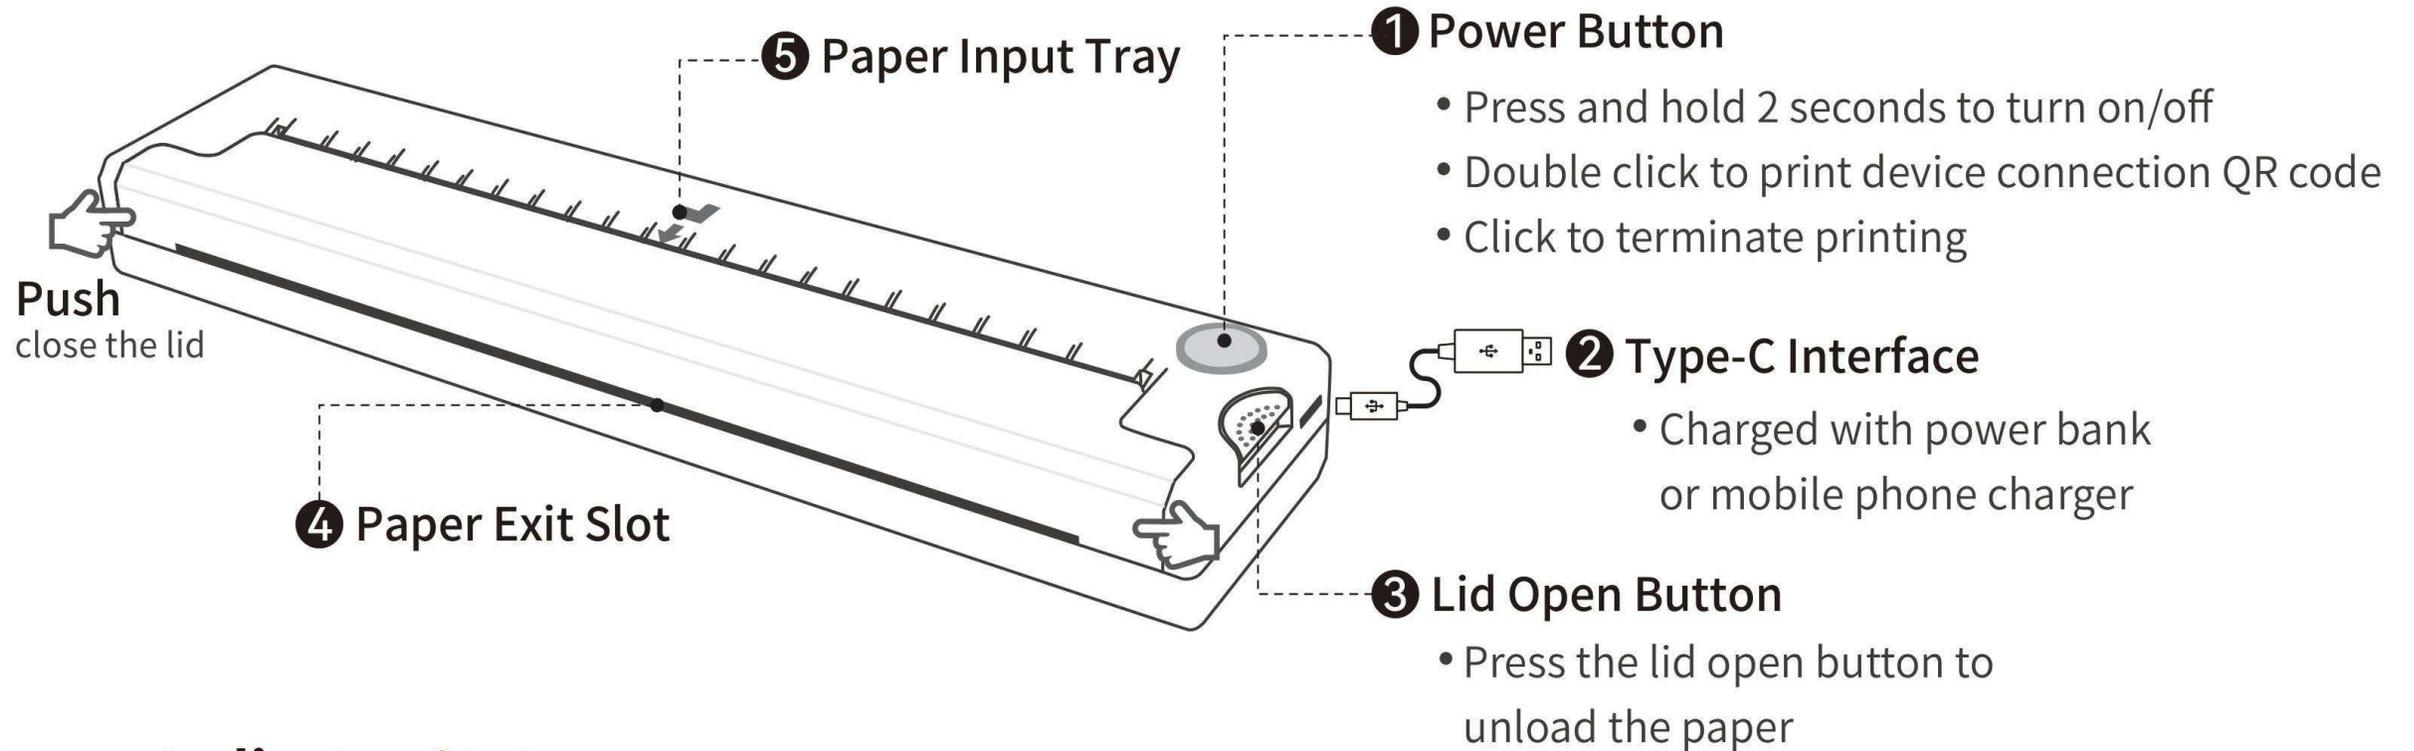


Power Indicator Status

- Green light constantly on: Ready to print
- Green light flashing slowly (once per second): Out of paper/Overheating
- Green light breathing: Charging
- Green light flashing quickly (twice per second): Low battery, please charge promptly


Paper Installation Instructions

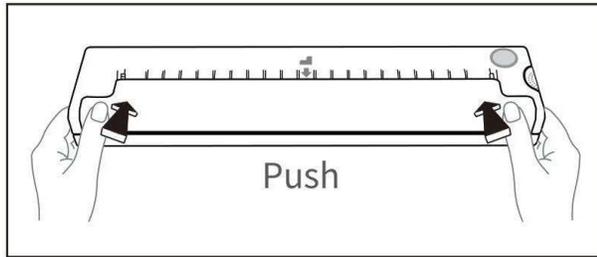

① Ensure the lid is closed tightly.

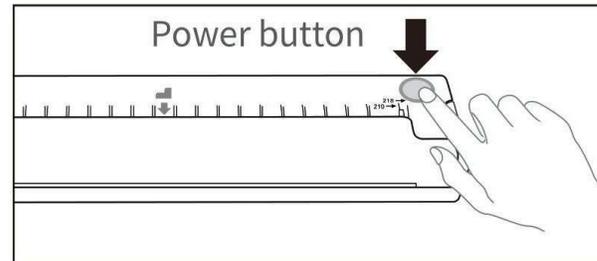

② Press and hold the power button for 2 seconds to turn on.

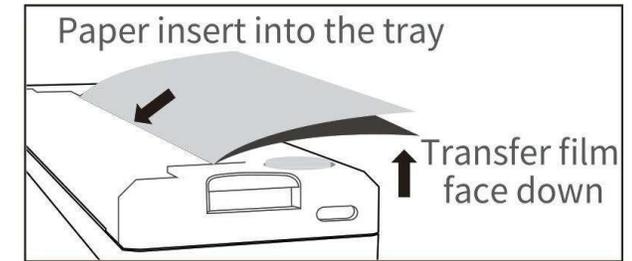

③ Align with the paper feed slot and insert until it is drawn in and cannot be pulled out. (Note: If a paper jam occurs, press the lid open button to remove the paper.)

App Printing

Step 1: App Download

Please search for [PeriPage] on Google Play or App Store, or scan the following QR code to download the App. Then watch the video guide below.




App Download



Video Guide

Step 2: App Connects to Printer

- ① Press and hold the power button for 2 seconds to turn on the printer.
- ② Open the [PeriPage] App, enter the interface of connecting the device, and click [Bluetooth Printing] to connect the printer. Or press the power button twice to print the QR code, then connect the printer by scanning the code.
(Tips: Don't connect printer in the mobile phone bluetooth settings.)
- ③ After the printer is connected, open the function provided by the App to operate Bluetooth printing.

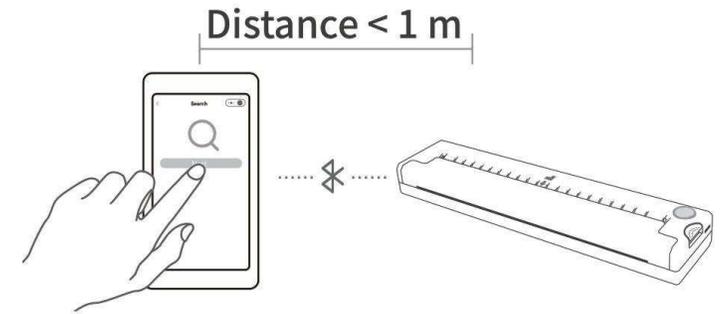

PC Printing

- ① Press and hold the power button for 2 seconds to turn on the printer. Connect the printer and computer with the original Type-C data cable.
- ② Please visit the official website, <https://www.ileadtek.com/en/download.html>, to download and install the printer driver for editing and printing.
- ③ After the driver is installed, select this printer when print documents on the computer.

Charging Instructions

- Input: 5V $\overline{=}$ 2A. It is recommended to use a mobile phone charger for charging.
- It is recommended to fully charge the battery before use.
- To avoid natural degradation and inability to charge, please recharge the battery every 3 months during periods of non-use.

Notes

If an incorrect battery type is replaced, there is a risk of explosion. Do not expose the battery to excessive heat sources such as sunlight, fire, or similar conditions, and avoid exposing it to extremely low pressure, as this may lead to explosions or leakage of flammable liquids or gases.



The paper tearing blade has a sharp edge. Do not touch it to prevent getting cut.




After printing, avoid direct contact with the print head to prevent overheating and potential scalding. Wait for at least thirty minutes after turning off the power before attempting to touch the print head.



The product is not suitable for children!

Clean the Printer Head

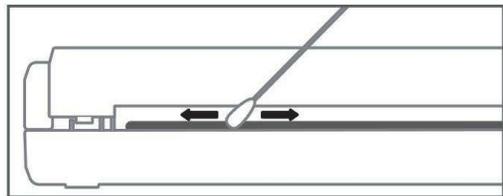

- 1 Please turn off the printer and open the printer lid and take out the paper.
- 2 Dip a cotton cloth or cotton swab with medical alcohol, and wipe gently along the center to the periphery of the printer head.
- 3 After cleaning the printer head, do not use the printer immediately. Please wait for 1 to 2 minutes, use the printer after the alcohol has completely evaporated.

Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by SAGE HUMAN ELECTRONICS INTERNATIONAL CO.,LTD may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & you body.

