

Speaker User Manual

I. Basic Button Operations

1. Power Button: Press and hold for 3 seconds to power on/off
2. Bluetooth Pairing Button: Press and hold for 3 seconds to enter pairing mode
3. Volume +/- Buttons: Adjust volume; press and hold for rapid increase/decrease
4. Play/Pause Button: Play/pause audio; double-click to skip to next track
5. Mode Switch Button (on select models): Switch between Bluetooth and TF card modes


II. Outdoor Waterproof and Dustproof Features

1. Avoid direct exposure to heavy rain; IPX7 rating allows short-term submersion
2. Wipe dry after use and air-dry before storage
3. Clean surface with a soft cloth in dusty environments

III. Portable Hanging Design

1. The hanging strap can be attached to backpacks, tents, or bicycles
2. The clip secures to clothing, saving space
3. Place on a stable, level surface to prevent tipping

⚠️WARNING: Please mind potential fire risk and strictly follow the instruction manual for charging and storage. For disposal, please check your local authority's website for more information and dispose of the lithium-ion battery safely in accordance with the applicable legal requirements.

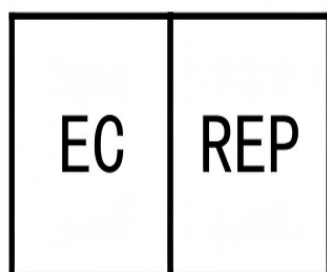

MJCM SARL
78 avenue des Champs—
Élysées Bureau 326,
mjcm190928@gmail.com
+33 0767213611