


## Installation/Instructions for Use

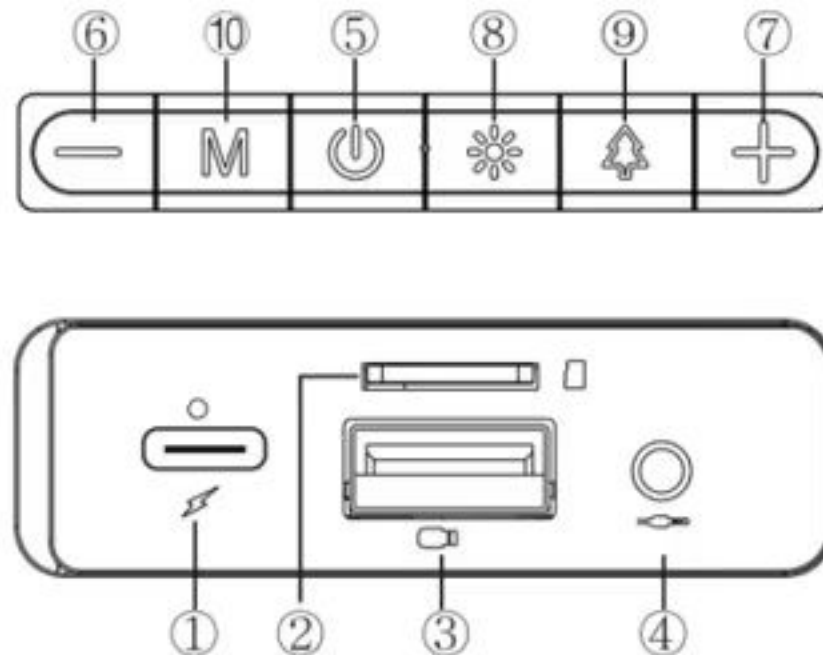

Function indication (corresponding to digital identification operation)

①DC 5V charging interface (type-c USB charging interface).

②TF card input interface: When the TF card is inserted, it can decode MP3/WAV format audio playback.

③U disk input interface: When the U disk is inserted, it can decode MP3/WAV format audio playback.

④LINE IN input interface: 3.5 audio head external sound input

⑤Power switch: Long press to turn on, long press again to turn off;

-In music mode (TF card, LINE IN, U disk, wireless), short press for "play/pause";

-In FM mode, short press to automatically search for radio stations, short press once during the station search process to cancel the automatic search for radio stations afterwards; -In wireless mode and when the phone is paired, when a call comes in, short press once for hands-free answering, short press again to hang up the phone, and double-click to redial the last dialed number.

⑥In music mode, short press for "previous song" and long press for "volume down";

⑦In music mode, short press for "next song" and long press for "volume up";

⑧LED switch: Short press to switch the light mode, long press to turn off the LED light;

⑨EQ button: Short press to switch the EQ mode;

⑩In music mode (LINE IN, TF card, U disk, wireless, FM), short press to switch the function mode;

TWS: When two speakers are simultaneously in the power-on wireless state and neither is connected to a mobile phone, long press the M button on one of the speakers for 2-3S to hear a prompt sound, which means the TWS connection is successful, and then connect to the mobile phone; disconnect the wireless connection and then long press the M button to cancel the TWS function.