



SMART
Make Life Better



STEP COUNT



ALARM CLOCK



CALORIES



MESSAGE

| Charging and active

A: Connect the charging cable to a 5V-1A adapter and plug it in. Charging the device for 2-3 hours.

B: Align the magnetic suction tube with the metal plate on the bottom of the device's outer shell. The magnet will automatically attach to the positive and negative poles and charge the device. Ensure that the charging contacts are clean and free from dirt and debris.

NOTE: If the device is not used for a long time, the battery may enter a 0 voltage protection state. Charge the device for at least 15 minutes to accumulate enough charge to start the watch at a sufficient level. It is recommended to charge the device once a month. Keep the device fully charged and power off when not in use.

| APP download

- ① Search “FitCloudPro” in the APP store
- ② Scan QR code to download.




| How to customize your watch face?

Long-press the current watch face to enter the watch face settings. Smart watch comes with a variety of pre-installed watch faces and also allows you to download additional watch faces from the watch face app market.



Limitations of Customization:

You can only save one custom watch face at a time. If you choose to download another watch face or customize a new watch face, the previously saved watch face will be replaced. This means that you will lose the previous customization and it cannot be recovered.

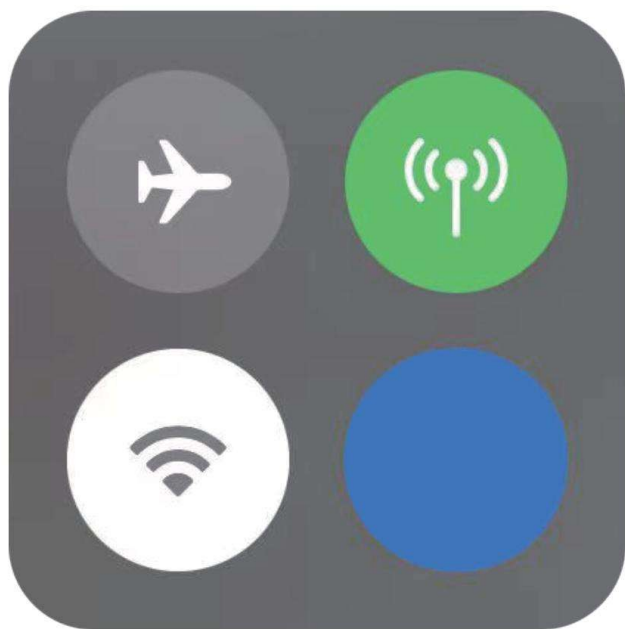

Please Turn On The Wireless of Mobile Phone Frist.

Step 1: Open “FitCloudPro” APP--“OK, Allow”--“Device”--“Add peripheral Now”--“Search Now”--Find **the Wireless** .

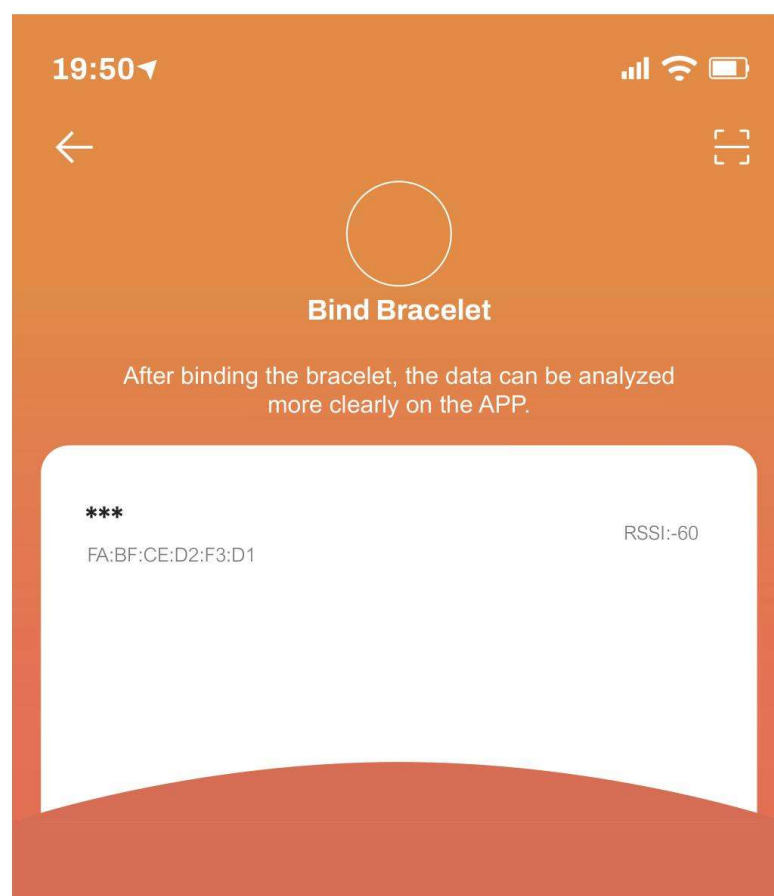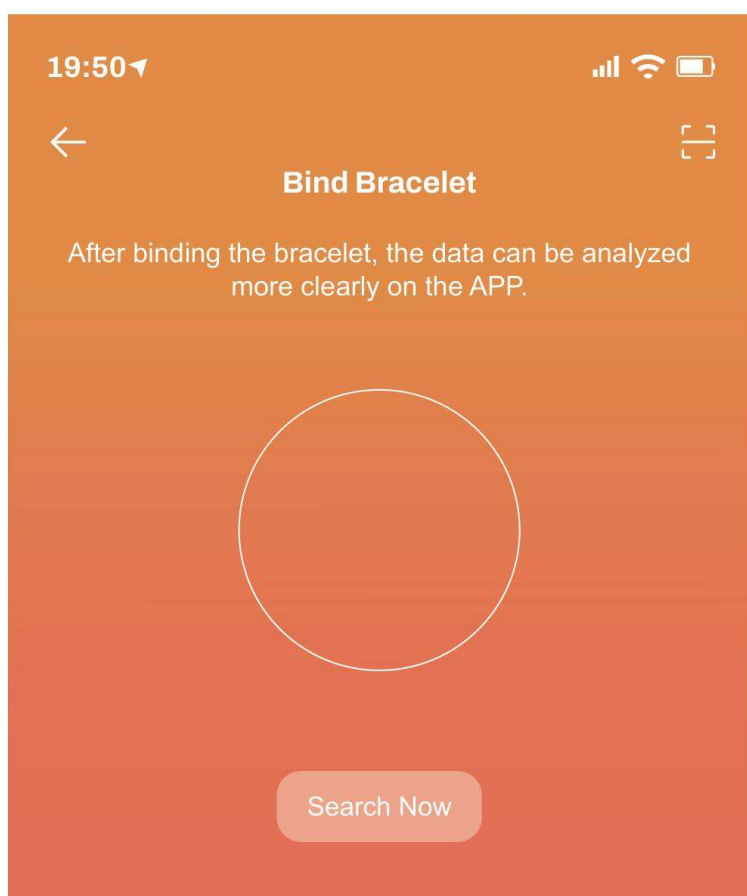


Step 2. Connect the Wireless Call function



Note: Only after this connection can you play music and answer calls

a .Swipe down on the standby screen of the watch, as shown in the lower left image . Tap the "Audio Wireless Call" icon to enter to the "Audio Wireless settings" screen, as shown in the image below right .

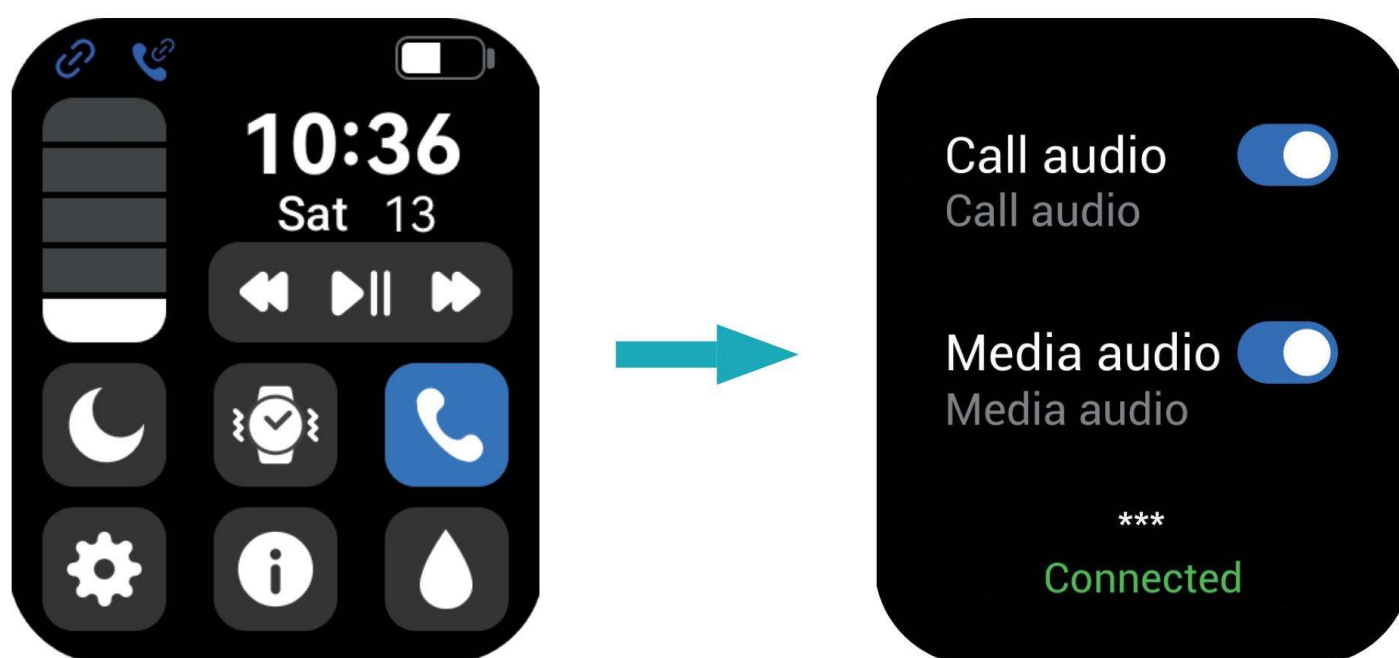

Turn on the call audio and media audio switches

b . If you don't want your watch to play audio when you receive calls, you can turn off this function . This is helpful if you're in a noisy environment or want to maintain personal privacy . Simply disable the function manually. (This switch only turns off Wireless call and Wireless play)

****Every time the watch is turned off/restarted or returned to the factory settings, the call function will be turned off by default .

c . If the wristband is too far from your phone for over 2 minutes, it will automatically disconnect to save battery life. To reconnect, you may need to manually connect via Wireless .