
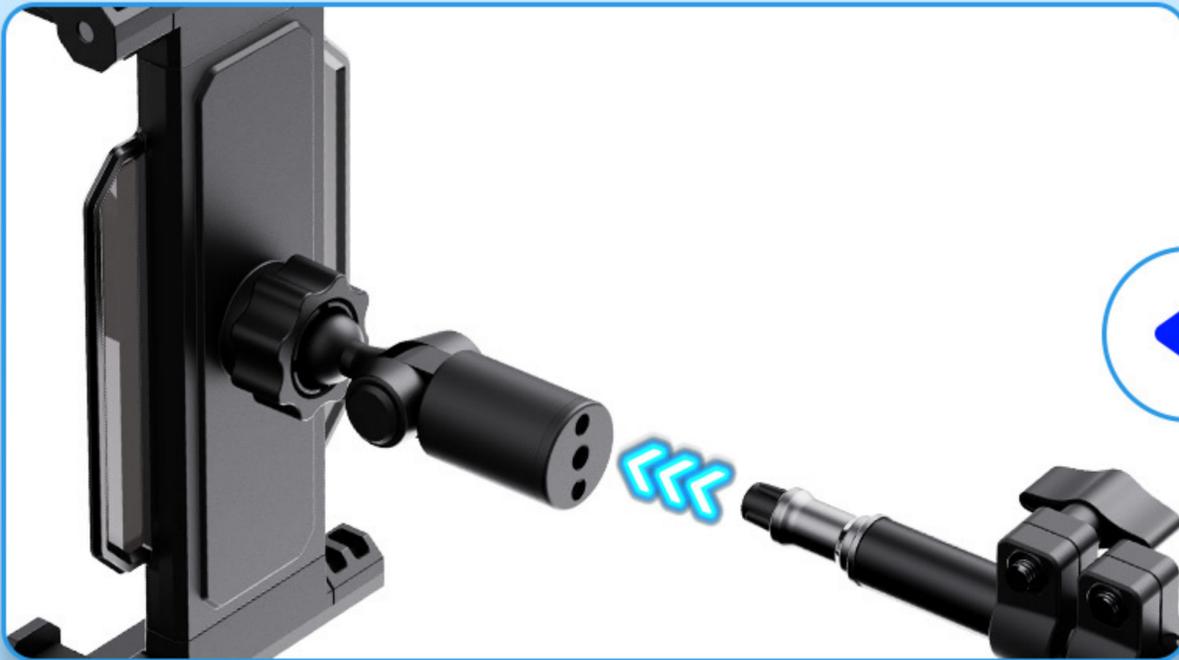


3-STEP INSTALLATION

1 Step 01

Remove the screw thread and install the base ball through the nut into the ball hole tighten a nut.

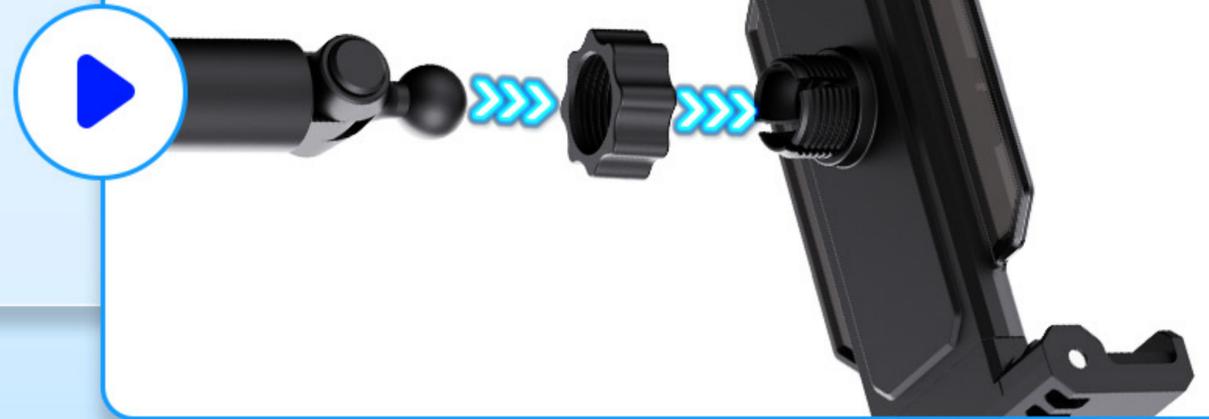

Step 02 2

Align the mounting base with the 1/4" and firmly twist clockwise to lock the mounting onto the base.

3 Step 03

Extend the tripod legs to your desired height ensure all legs are level with the ground, and tighten the joint locking knobs to stabilize the setup.

